

#6-0943 SINGLE BAG GRASS CATCHER KIT for 28" & 33" REAR ENGINE RIDERS AND LAWN TRACTORS

This Single Bag Grass Catcher Kit fits SNAPPER 28" & 33" Rear Engine Riders. It also fits SNAPPER Tractors provided the tractor is equipped with the rear mount adapter kit & has 33" mower. Kit #6-1068 is required for the Disc & Hydro Drive Lawn Tractors series 0, 1 & 2. Kit #6-0875 is required for Yard & Garden Tractors series. Kit #6-1334 is required for Tractors series "A", "B", "C" & "D".



WARNING



Before attempting any adjustments, maintenance, service, or repairs, stop engine and blade, always remove key from ignition switch, remove spark plug wire(s) and secure wire(s) away from spark plug(s). Engine, muffler and surrounding areas are extremely hot. Allow components to cool down before installing kit. Load Carrier Kit #6-0197 with 50 pounds MUST be installed prior to operating machine with catcher on slopes. DO NOT operate machine on slopes exceeding 10 degrees (18% grade) when equipped with grass catcher. DO NOT operate machine without entire grass catcher or deflector in place. Inspect all grass catcher components frequently for signs of wear and deterioration. Replace worn or damaged components immediately.

STEP 1: BUMPER REINFORCEMENT BRACKET & MUFFLER GUARD INSTALLATION (USED ON REAR ENGINE RIDERS ONLY)

Remove the two screws securing the right side rear bumper. Remove screw from right rear panel. Install bumper reinforcement bracket and secure to right rear panel, secure with screw. See Figure 1. Place muffler shield against bumper reinforcement bracket and right side rear bumper, install screws. Tighten securely. See Figure 1.

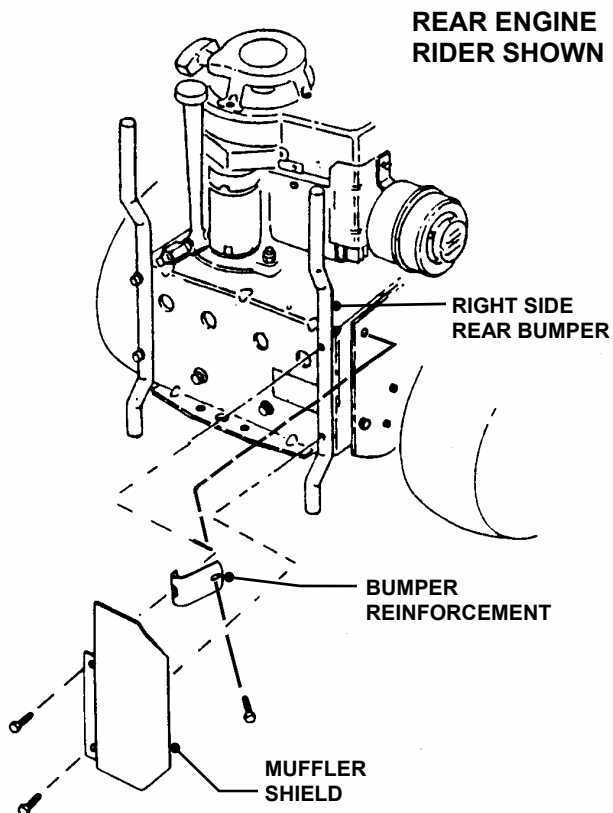


FIGURE 1

STEP 2: REMOVAL OF DEFLECTOR (Tractors Only)

A. Remove the hinge nut, spring and hinge pin from deflector. Remove deflector. Remove wing nut, flat washer, bolt retainer and bolt from deck. Save for future use when not bagging grass. See Figure 2A.

33" DECK

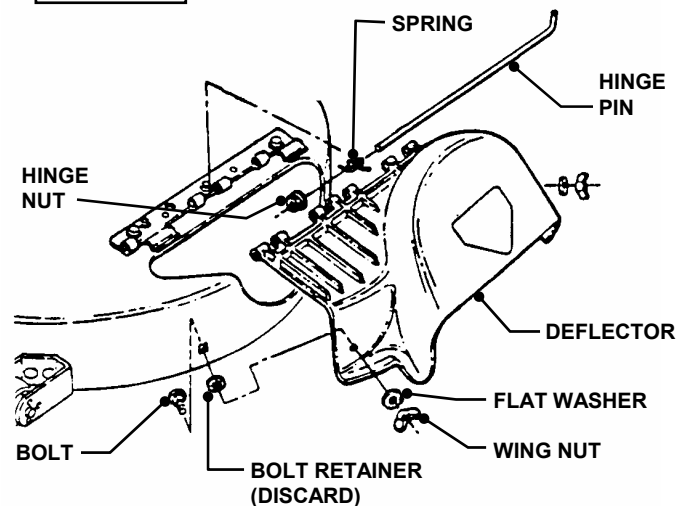


FIGURE 2A

Note: The deflector on rear engine riders need not be removed (except on some older models). Lift the deflector up and out of the way before installing adapter.

B. ADAPTER INSTALLATION

Install the previously removed bolt into the hole in the center of the discharge opening. See Figure 2B.

33" DECK

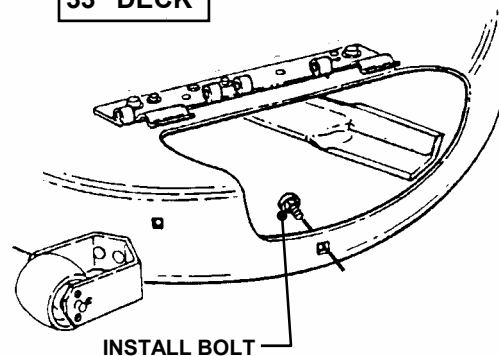


FIGURE 2B

C. ADAPTER INSTALLATION

Hold the adapter in front of the deck. Align the adapter lugs with the hinge lug retainers, and then push the adapter to the rear.

Loosen bolts (see Figure 2C) & bump the adapter, if necessary, to force the lugs under the lug retainers. Secure the adapter to the deck with a flat washer and wing nut. Tighten bolts. See Figure 2C.

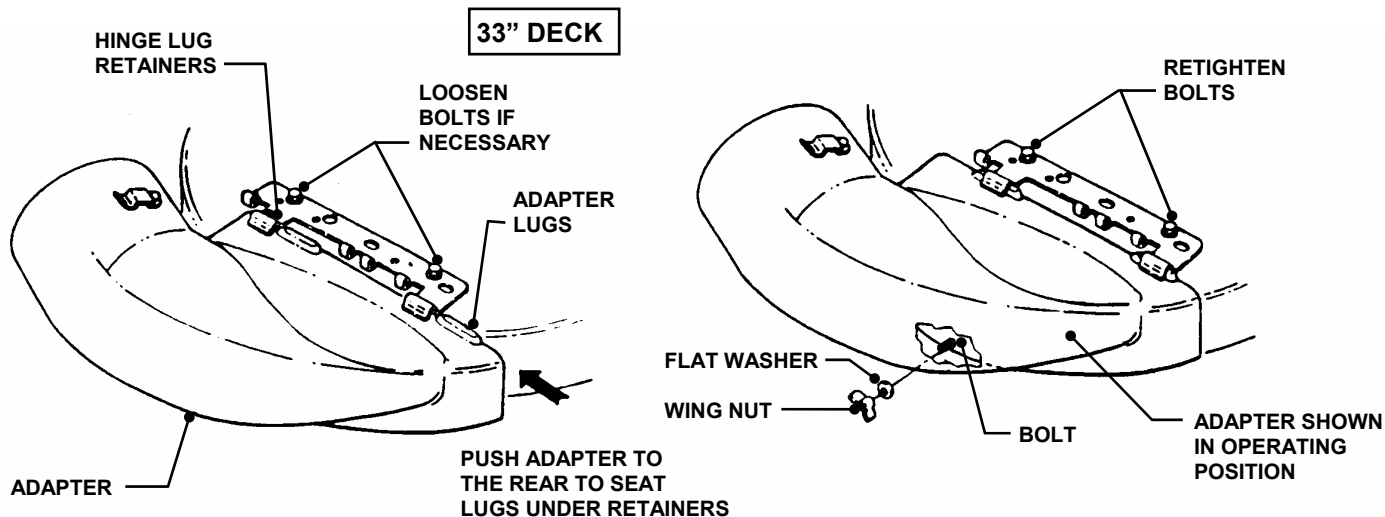


FIGURE 2C

STEP 3: COVER/FRAME INSTALLATION

Lower cover/frame structure into position on bumper. Secure each side of structure as follows: Insert one 5/16 x 1-11/16" clevis pin through top hole at each side of cover/frame structure as shown in Figure 3 and secure with 3/32 x 1-1/2" hairpin cotter.

NOTE: When Rear Engine Rider is equipped with two-piece post style bumper (as shown in Figure 1) install clevis pin in lower hole at each side of cover/frame structure.

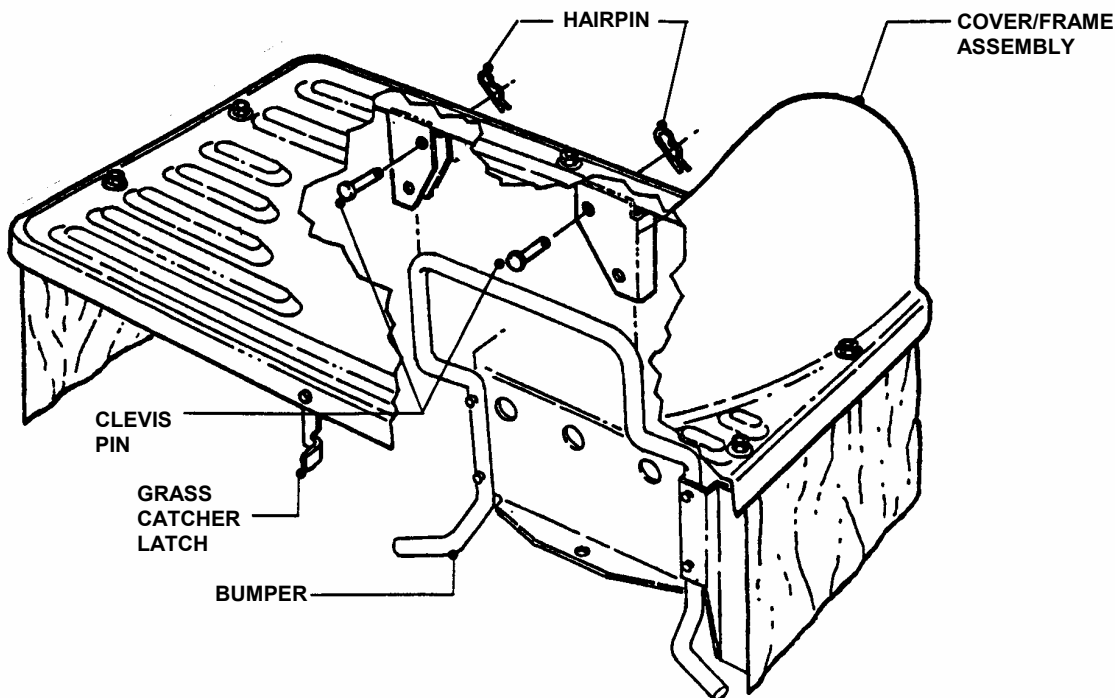


FIGURE 3

STEP 4: GRASS BAG INSTALLATION

Move the latch aside, then slide the grass bag into the frame with open mesh to the rear of the mower. Secure bag with latch. See Figure 4.

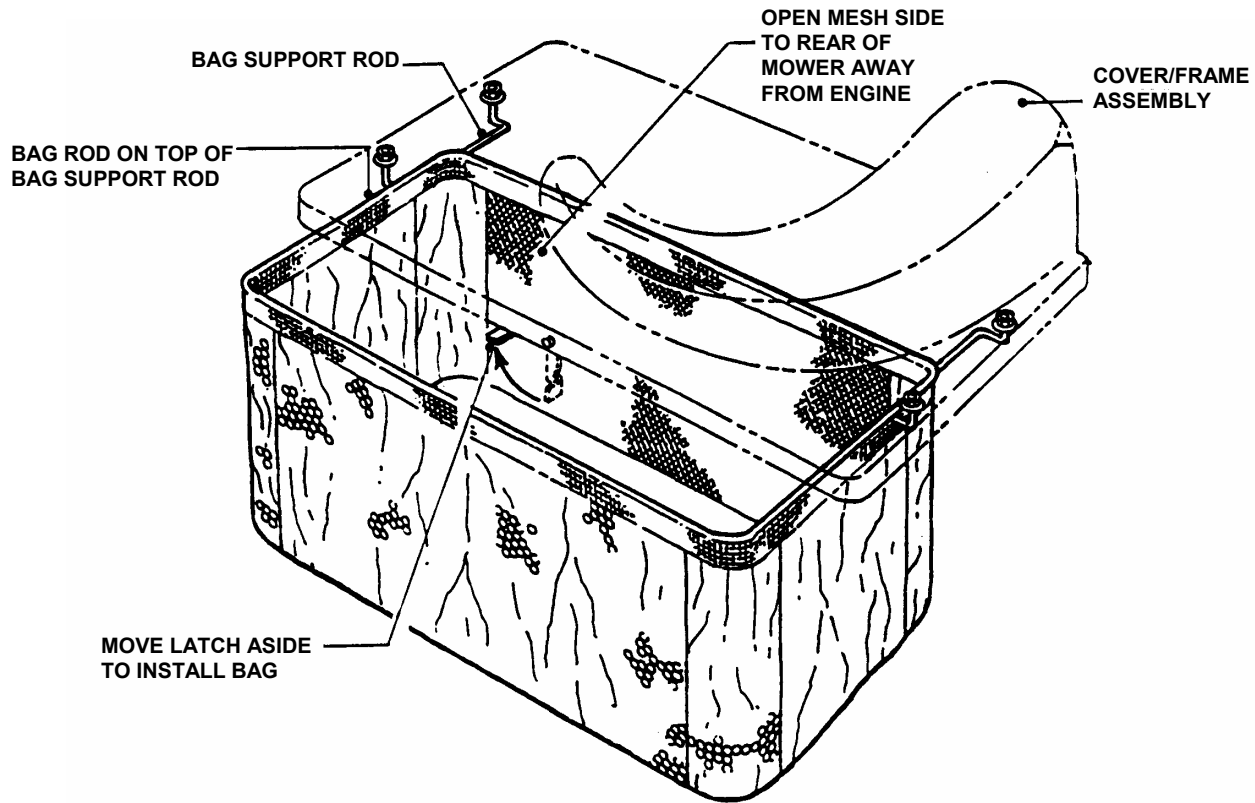


FIGURE 4

STEP 5: GRASS TUBE INSTALLATION

A. Slide upper end of grass tube into opening of cover/frame structure.

B. Slide lower end of grass tube over adapter end and rotate tube towards mower to secure handle hook under latch. See Figure 5.



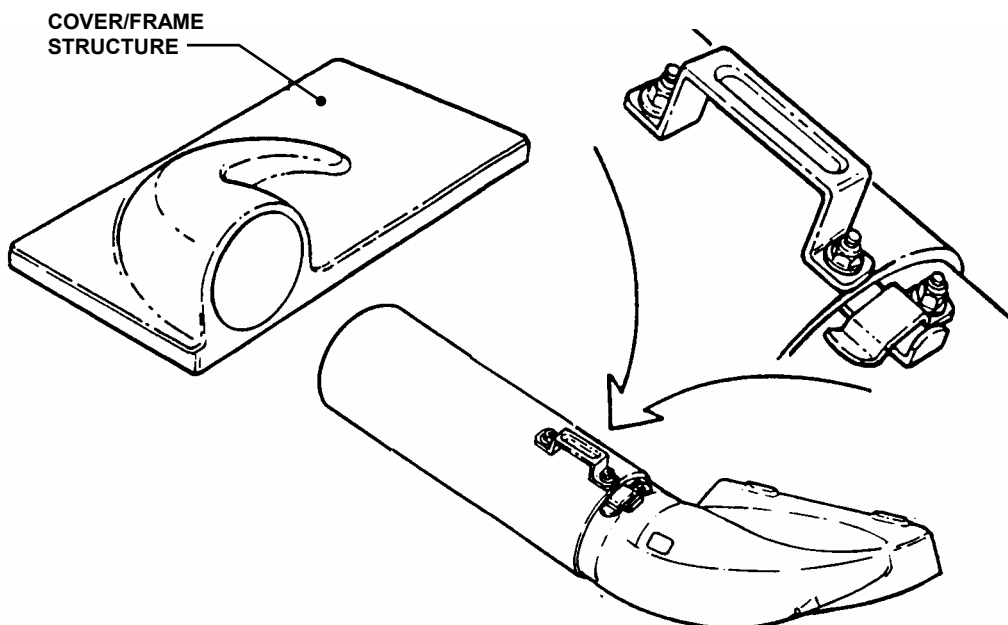


FIGURE 5

SINGLE BAG GRASS CATCHER ILLUSTRATION

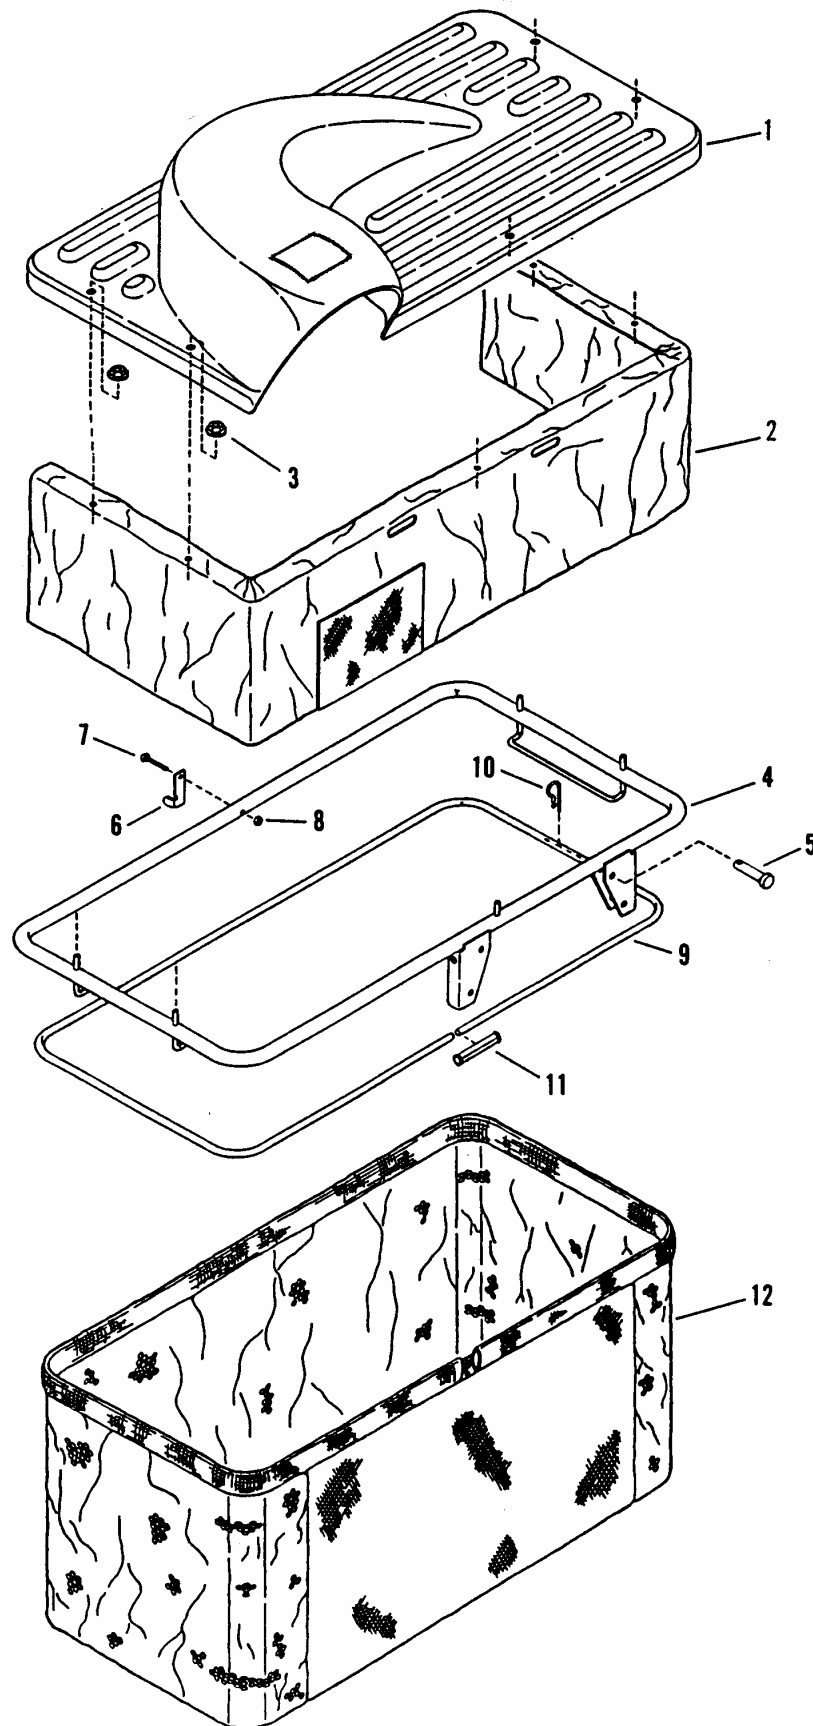

(Continued)

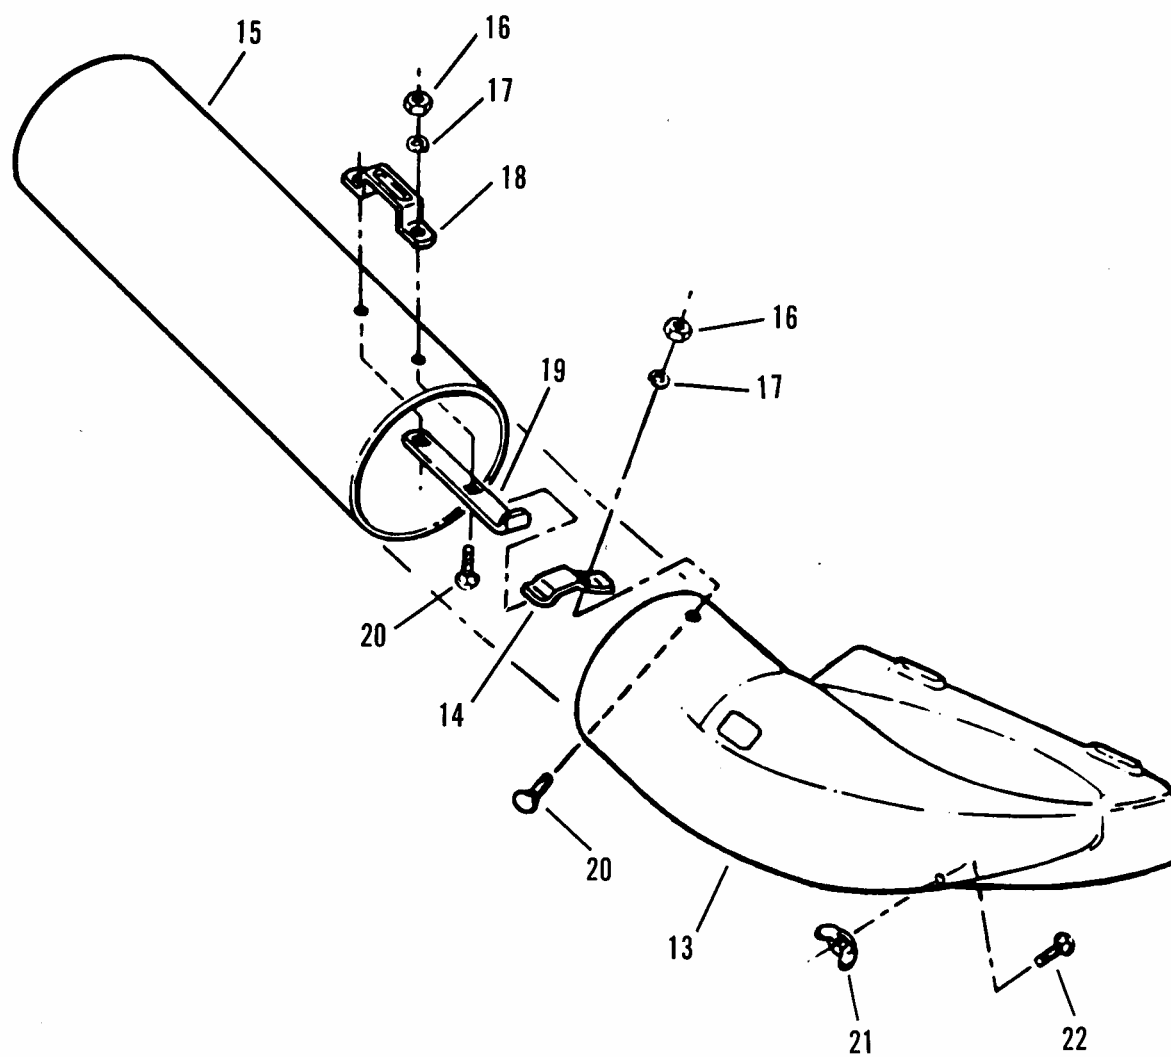

SINGLE BAG GRASS CATCHER PARTS LIST

ITEM	PART NO.	DESCRIPTION
1	5-1948	TOP, Container
2	1-6108	SKIRT, Dust
3	2-9840	WASHER, Faceted (5)
4	4-7973	FRAME, Grass Bag
5	2-9841	CLEVIS PIN, 5/16 x 1-11/16 (2)
6	3-1725	LATCH, Grass Catcher
7	9-0532	SCREW, 10-32 x 1-11/16 Hex Cap
8	9-0376	NUT, 10-32 Hex Lock w/Nylon Insert
9	3-7758	ROD, Bag
10	9-1503	PIN, 3/32 x 1-1/2 Hair (2)
11	1-2556	CONNECTOR, 1/2 x 3" Rod
12	1-9251	BAG, Single Zipperless
13	1-9912	ADAPTER, Bag
14	3-1951	LATCH, Tube
15	1-4517	TUBE, Grass
16	9-1576	NUT, 1/4-20 Hex (3)
17	9-1314	WASHER, 1/4 Lock (3)
18	3-7745	HANDLE, Tube
19	3-1952	BASE, Handle
20	9-1530	BOLT, 1/4-20 X 3/4" (3)
21	9-1537	WING-NUT, 5/16-18 Lock
22	9-1303	BOLT, 5/16-18 X 1" Carriage
--	7-1677	SHIELD, Muffler (Shown on Page 1)
--	4-2716	BRACKET, Bumper Reinforcement (Shown on Page 1)